

A photograph of a snowy park scene with trees and a person walking in the distance.

Your Elevator Checklist

Winter

Regular Checks During Winter

- Machine room temperature (50-70°F minimum)
- Eliminate air leakages in machine room
- Ensure steel rails are lubricated
- Ensure all door tracks are clear of debris

When Anticipating a Storm

- Check pit condition
- Check the function and charge of battery backup
- Barricade the motor room
- Close hoistway vents and openings

During a Flood

- Move elevator cars to the top floor
- Shut down the system and power
- Ensure there are no remaining building occupants who depend on the elevators to evacuate

Dura-Lift Elevator 201 Hartle Street, Suite B, Sayreville, NJ 08872

www.duraliftelevator.com

732-446-4674

sales@dlift.com